


Angle Light Zoom Using the Zoom Head Spring Mechanism

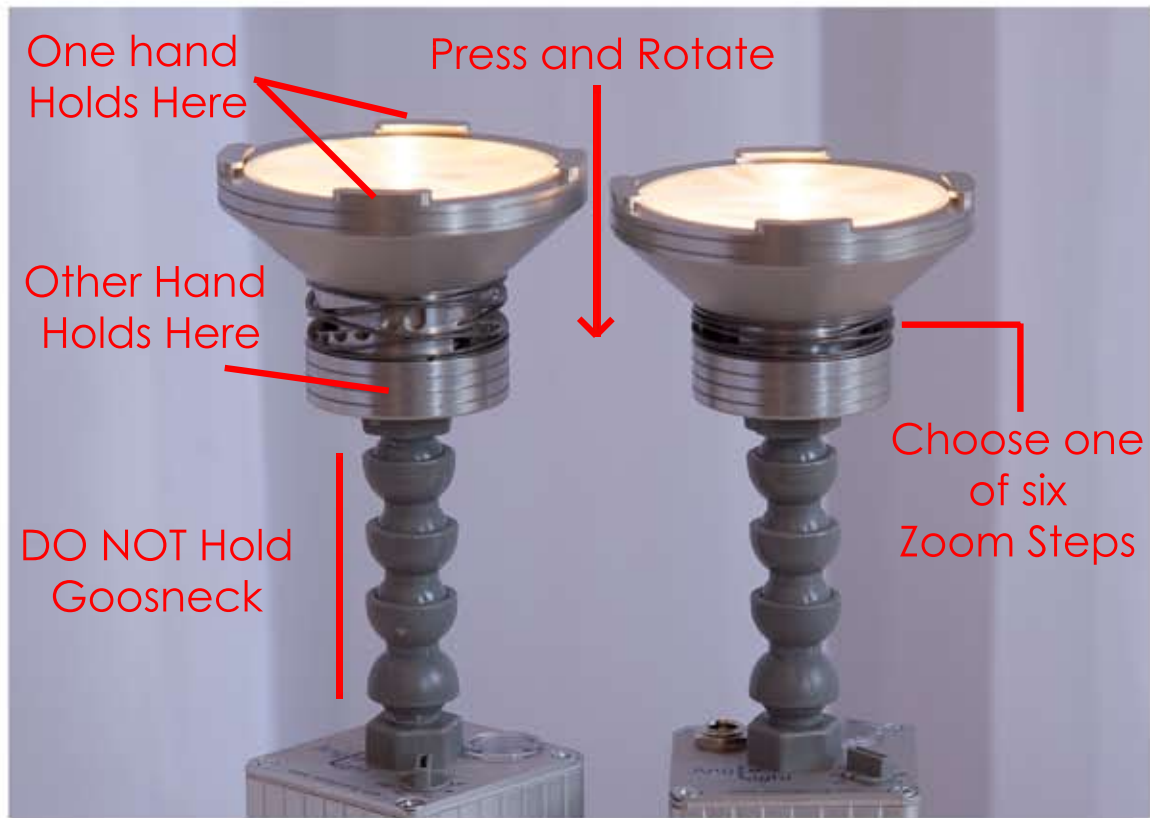

To adjust the size of the Angle Light Zoom Beam using the Zoom Head Spring Mechanism:

- Hold the top of the head near the lens with one hand, and hold the base of the head with other hand.
- Gently press the top of the head down toward the body of the fixture and rotate.
- The spring will compress and allow you to select and lock in one of six Zoom steps. These steps incrementally vary the beam size from approximately 4deg to 20deg.
- DO NOT hold the fixture by the gooseneck or body while pressing and rotating the head. Doing so may damage the gooseneck or Zoom Spring Mechanism.